

Read through this section first

We include a detailed user manual with the device so that you can operate your MP3 more easily. You can get information about the product and learn how to operate it from the manual. Please read through the manual before you use your MP3 player, so that you can use the product correctly.

This company will not be responsible for any loss or damage of individual data directly or indirectly resulted from misusing the software or hardware, maintaining this product, replacing the battery and other unexpected conditions, nor is it responsible for other indirect losses resulting. Meanwhile, we cannot control users' understanding of this manual. Therefore we cannot be responsible for unexpected losses resulted from using this manual, nor any third party's claim due to using this product.

The information in this manual may be changed without prior notification!

Contents



Brief introduction to the device

Parts names	3
Connecting with a PC	4
Illustration of the LCD interface	5
Power On/Off Switch	6



Operating instructions

Music Playing Mode	7
Radio Playing Mode	9
Recording Mode	11
File Viewing	12
Picutre Viewing	14
Setting up the System	14
Movie Playing Mode	14
E-book	14
Game	14




Customer Support

Product Specifications and Parameters	15
---	----

Brief introduction to the device


Part Names

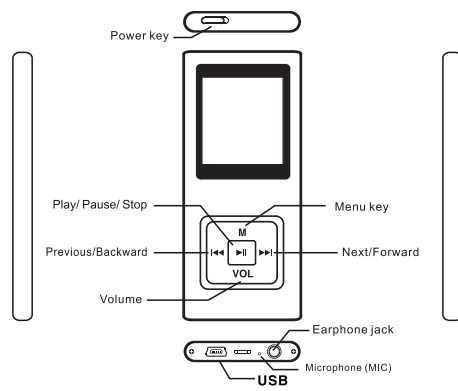

How to connect this device to a PC

Connecting to a PC

Connect the USB cable to the PC as in the picture below.

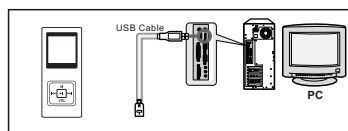

When the Player is connected with the PC, the LCD displays the following image.




Common Connecting,
USB mode

Press VOL simultaneously and connect to PC by USB, then you can upgrade.


Brief introduction to the device

Instruction of the LCD interface

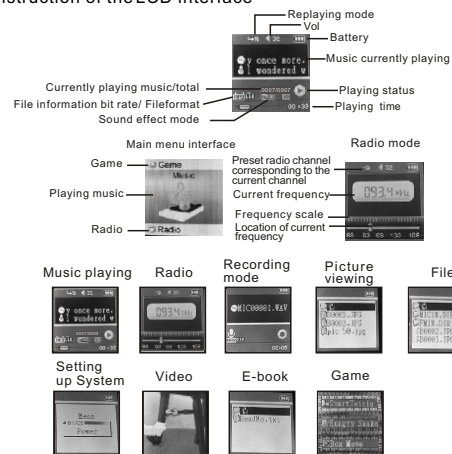


Brief introduction to the device

Power On/Off :
Press power button to turn on./ Off.

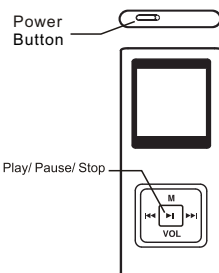

Connecting the earpieces
Insert the earpiece plug into its socket



Operating instructions

Music playing Mode

1. Press and hold ►|| to enable the player;
2. Press Mode button to enter the main menu;
3. Press ◀◀►► to select the music playing mode;
4. Press Mode button to enter the music playing mode;
5. Press ►|| button to play music;

In the playing mode:


1. Press ◀◀►► to select the last/next music file;
2. Press and hold ◀◀►► to fastforward or rewind;
3. Press ►|| to pause playback;
4. Press VOL and then ◀◀►► to increase/decrease the volume;

Setting up the sub-menu for playing music

1. In the playing mode, press Mode to enter the playing sub-menu;
2. Press to ◀◀►► select the menu option;
3. Press Mode to confirm your option;
4. Press Mode to return to the playing interface.

Menu options for music playing

- Repeat
- Equalizer
- Play Rate
- Files

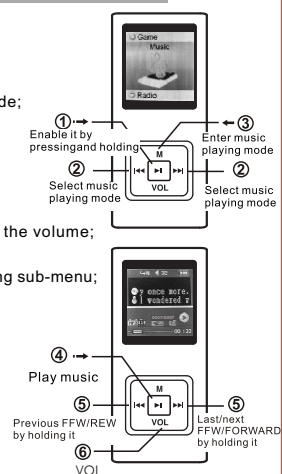

Operating instructions

Parameters of the playingsub-menu:

Playing mode

•Repeat mode:

No Repeat One, All, Random All, Dir Rep One, Dir Rep
Dir Ran All

•7 Preset EQ: Normal, Pop Rock, Classic, Jazz, Bass, Custom EQ

Custom EQ:

1. Press **◀▶** select frequency
2. Press **MODE** key to confirm
3. Press **◀▶** select add or decrease frequency
4. Press **MODE** key to confirm

3D mode

Play Rate: 1.00X, 1.14X, 1.33X, 0.67X, 0.80X

Files


- Users can save files in any existing folder
- via player users need to create folder
- via PC before.

1. Select play state

2. Press Mode to entry submenu; And press **◀▶** to select files;
3. Press Mode again to entry root directory;
4. Press **◀▶** to select;
5. Press PLAY to confirm

Re-reading mode:

- 1). Press VOL to confirm the starting point A.
- 2). Re-Press VOL to confirm the finishing point B; then the player will replay the contents from point A to point B.
- 3). Re-Press, the player will return to the normal playing mode.

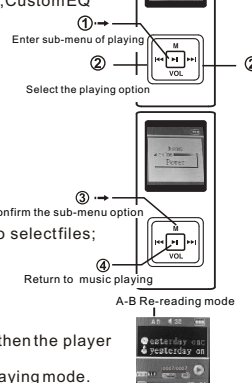

Operating instructions



Setting up the sub-menu for stopping music :

1. Press Mode to enter the menu in the stop mode;
2. Press **⏮** to select the option of the sub-menu;
3. Press Mode to confirm the option;
4. Press **⏭** to return to the music playing interface;

Editing the synchro song lyric

- 1). Open the notepad to edit the synchro lyrics of a song; Enter the Stop Sub-menu Description of the format(MM:SS) lyric texts... (change lines)
- 2). Save the file which has the same name of the song and an ".LRC" extension after editing it.
- 3). Upload the file with the edited lyrics to the player; Press and hold the Mode in the playing mode; the synchro lyrics of the song appear. Edit lyric with notepad Operating instructions select radio. Press and hold to enable it Press and hold to enable it.


Stop Mode

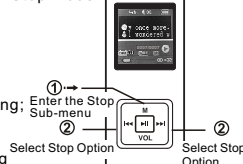

② Save files + .LRC


Radio Mode

1. Enter main menu; select "Radio"; press Mode to enter the "Radio Mode";
2. Regulating channel manually:
Press **⏮** from 87.5~108KHZ forward and backward
3. Auto searching: Press and hold **⏮**, the player searches automatically forwardly or backwardly and stops at the found channel; press **⏭** can stop it during the automatic searching;

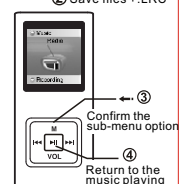

Operating instructions

4. How to saved the searched channel:
Press and release Mode to enter FM sub-menu;
select save the channel; press and release Mode
to confirm;
5. Listen the saved channels selectively; in case
there are multiple saved channels, listen them
one-by-one by pressing and releasing ►|| .
6. Internal Recording function:
you can record your favorite
programs when you are
listening to them; press and
release Mode to enter FM sub-menu;
select recording now you can record
the programs currently recording
in the recording file. Press and release
Mode to exit from recording.
7. Press **VOL** and then ►|| to increase/decrease
the volume.
8. Press and hold Mode to exit the radio mode. Press and
release to search channel manually, Press and hold to
search channel automatically.

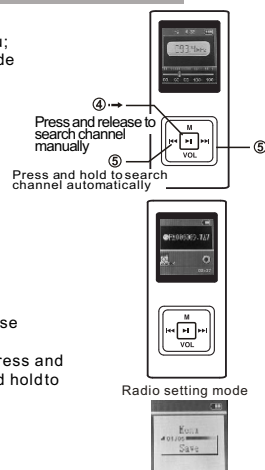

Operating instructions

Recording mode:

1. Press and hold **▶||** to enable the player;
2. Press and hold **MODE** to enter the main menu;
3. Press **◀▶** to select the recording mode;
4. Press **MODE** to enter recording playing mode;
5. Press **▶||** to play the recording file;

In playing mode:


1. Press **◀▶** to select previous/next;
2. Press and hold **◀▶** to play the voice at double speed or in reverse;
3. Press **▶||** to pause/stop playing;
4. Press **VOL** and then **◀▶** to increase/decrease the volume;

Setting up sub-menu of recording playing:

1. Press **MODE** to enter the sub-menu of playing in the voice playing mode;
2. Press **◀▶** to select sub-menu option;
3. Press **MODE** to confirm the option; and turn the recording playing interface.

Options of the sub-menu for voice playing:

Repeat mode (see music playing mode); Playing rate (see music playing mode); Record (you can press **MODE** to enter the sub-menu of ; and Press **◀▶** to select the recording mode; press **MODE** to recording now; if you will exit Recording mode, you can press **Mode** enter recording mode);

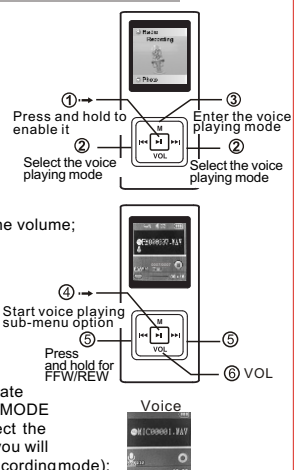

Operating instructions


Picture Viewing:

1. Enter main menu to select "Photo Press MODE to enter "Photo mode.
2. Press ◀▶ to select last/next; press ▶ to play picture;




File

1. Press and hold ▶ to enable the player.
2. Press MODE to enter the main menu.
3. Press ◀▶ to select the File.
4. Press MODE to enter into the sub-menu:
Deleting file: Yes or No
5. Press MODE to affirm.
6. Press long MODE to exit.

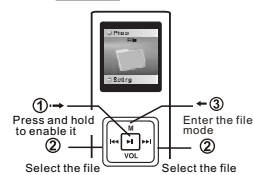

Setting up system

1. Press and hold ▶ to enable the player;
2. Press MODE to enter main menu;
3. Press ◀▶ to select system setting up;
4. Press Mode to enter system setup.

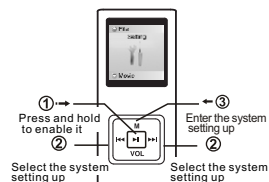


Operating instructions

Options of the system setting up

- Power
- Language
- Display
- Record
- Sys Tools

Parameters of the system setup options

- Power-saving mode: You can press VOL select always on. It works only in the music stopping mode. (5Sec-60Sec/on It will be 5 Secretary longer when choosing to press the button everytime);
- Language selections: FR,CH,PT,DU,EN,IT,GR,SP ...
- Display setup
 1. Brightness regulating: Regulating the brightness of the screen ;
 2. Black Screen Mode: Setting up a back screen period (5Sec-30Sec/On It will be 5 Secretary longer when choosing to press the button everytime);
- Record mode: High quality recording;
Normal recording;
Low quality recording;
- Sys Tools: Format
Reset
Sys Info:
- Storage: Internal



Customer Support

Movie playing mode:

Please refer to the steps of playing music when you play MTV movie.

During playing of MTV movie, only the following buttons are effective:

▶|| Button: Stopping playing/turning off the player by pressing and holding it;

⏮ ⏭ Button: Last/next Press VOL and then

⏮ ⏭ to increase/decrease the volume


Press MODE to exit in the playing

Ebook

1. Press and hold ▶|| to enable the player.
2. Press MODE to enter the main menu.
3. Press ⏮ ⏭ to select the E-BOOK.
4. Press Mode to enter the E-BOOK.
5. Press ⏮ ⏭ to select last/next.
6. Press ▶|| to open the contents in the file.
7. Press and hold ⏮ ⏭ to flip over fast forwardly or backwardly.
8. Press Mode to exit.

Game:

1. Enter the main menu; select "Game", Press Mode to enter the "Game"
2. Russian Diamond:
 - Start the game: press Mode to start
 - Introduction
 - Level Set
 - History
3. Hungry Snake
4. Box Move

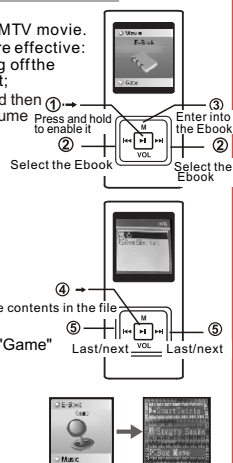

Customer Support

Product Specification and Parameters

Item	Specifications	
Memory size	1GB/2GB/4GB/8GB	
Max REC Time	REC time:35hours(128M Flash)	
Battery Longevity	MP3 Playing: 6 hours	
Support file format	Music format	MP1,MP2,MP3,WMA,WMV,WAV
	Recording format	WAV(32K -128K bps)
FM Radio	87.5MHz-108MHz	
Output power of samples	(L) 10mW+(R) 10mW (32ohm)	
USB	Ultra-USB2.0 (FS) Flash disk!	
LCD	1.5inch colored screen	
Supported language	FR,CH,PT,DU,EN,IT,GR,SP...	
Exterior size	90mmx40mmx8mm	
Weight	43g	
Memory mood	Type flash memory	
Working temperature	-10℃ —50℃	
Signal/Noise ratio	≥90dB	
Output distortion	<0.1%	
Range of output frequency	20HZ-20KHZ	
Recording sampling frequency	8KHZ	